





LanTEK IV

System Software Installation Procedure



SYNC SAVED TEST RESULTS TO AnyWARE CLOUD BEFORE CONTINUING TO PREVENT INADVERTENT LOSS OF TEST DATA.

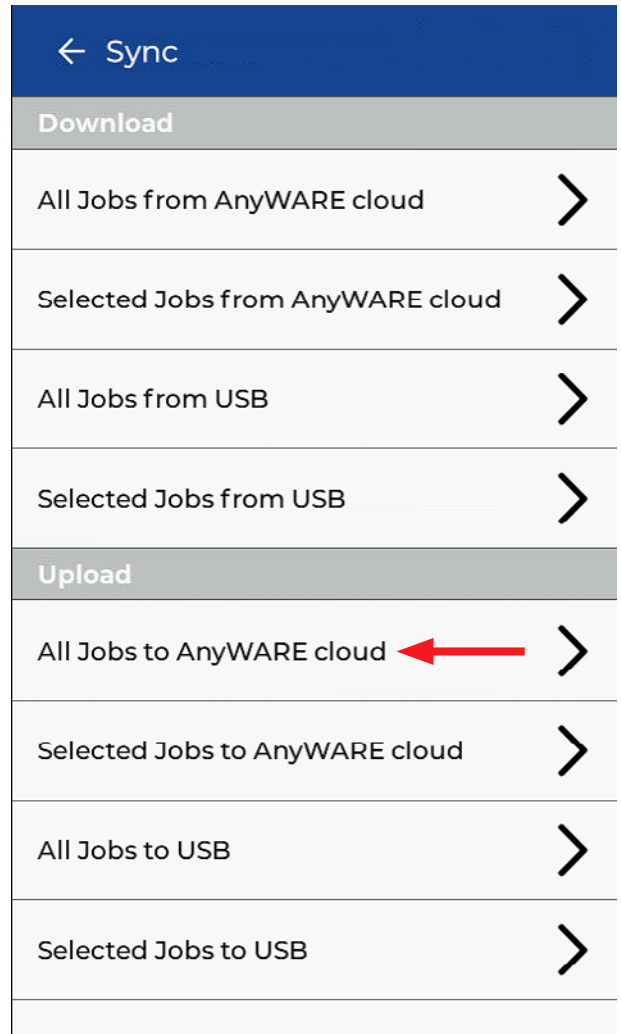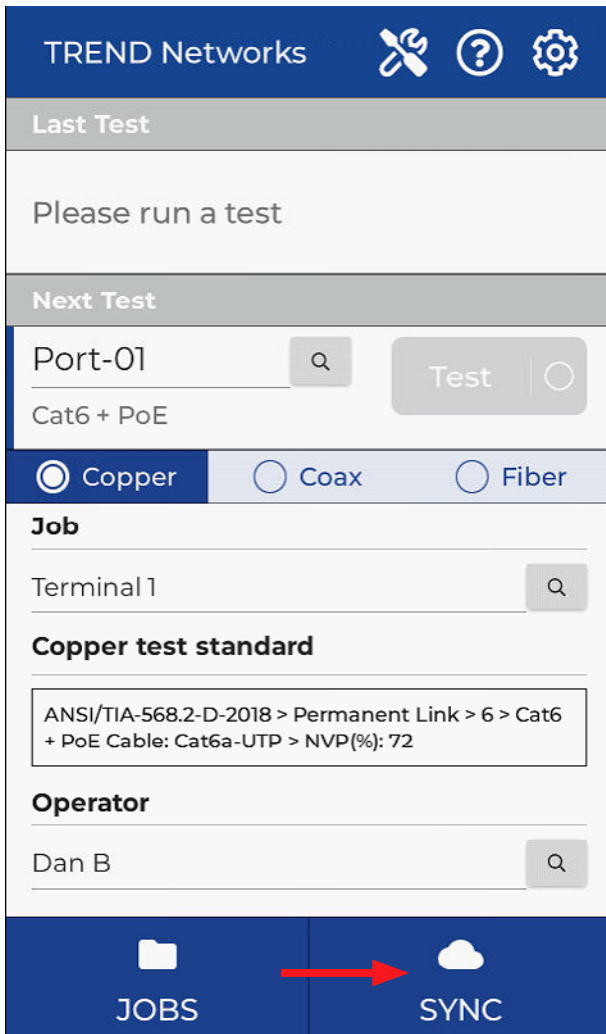

1. Download the software


www.trend-networks.com/support/downloads/

2. Copy to USB drive








LanTEK 4.1.5 System Image.zip

4-32GB FAT32 Kingston, Sandisk, Samsung, etc.

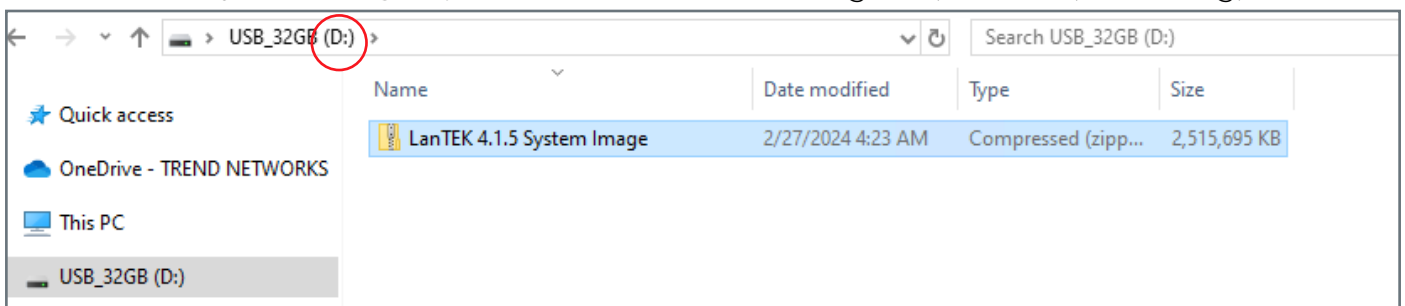

3. Extract files

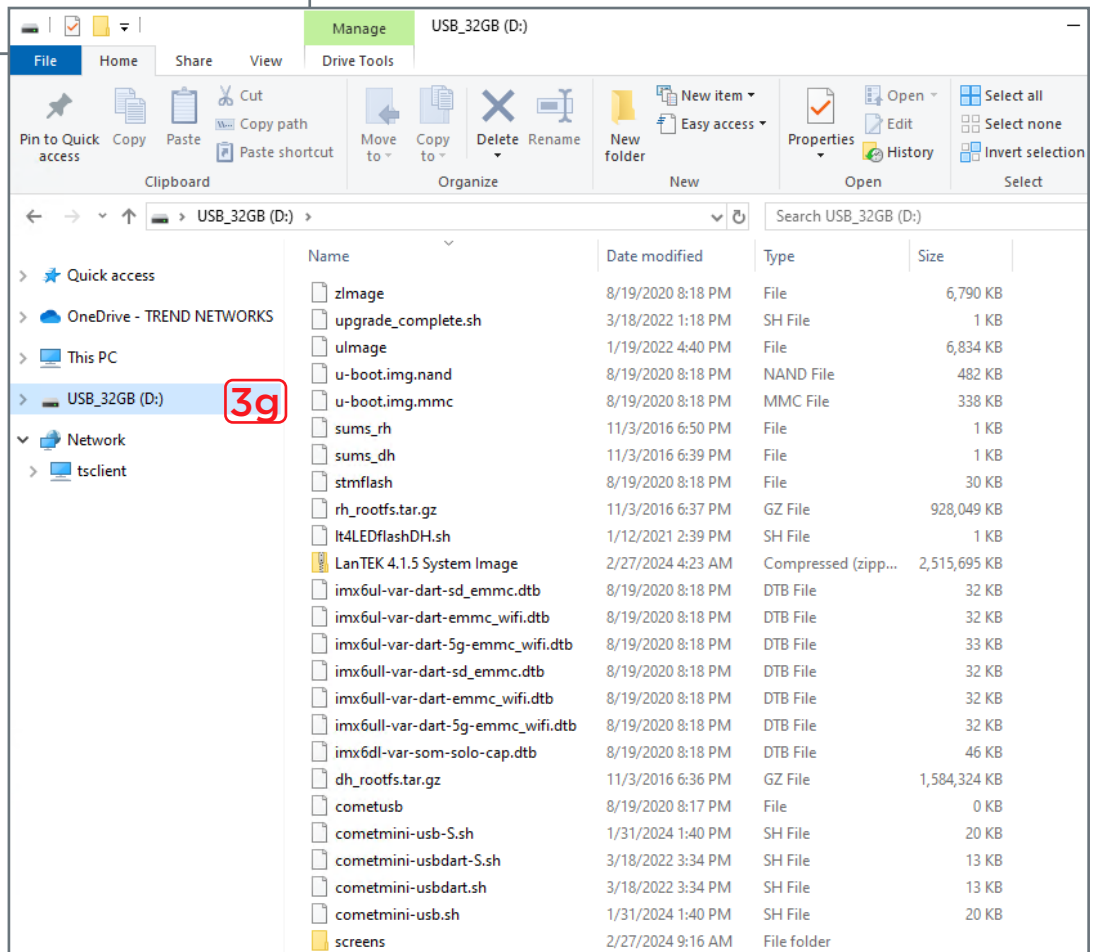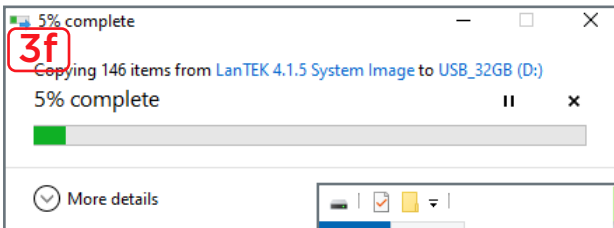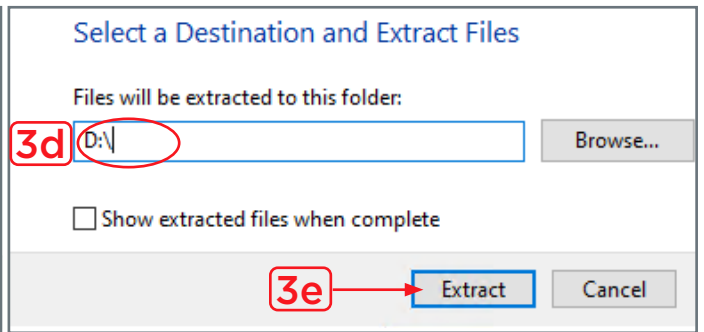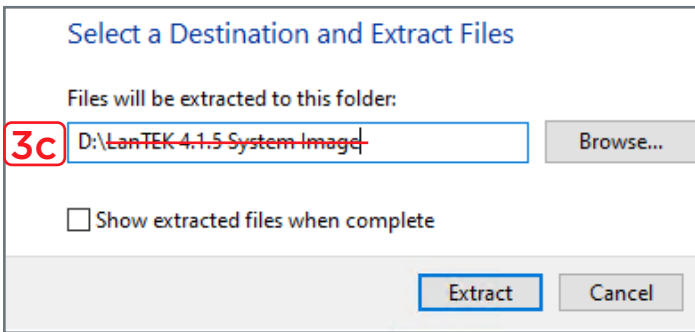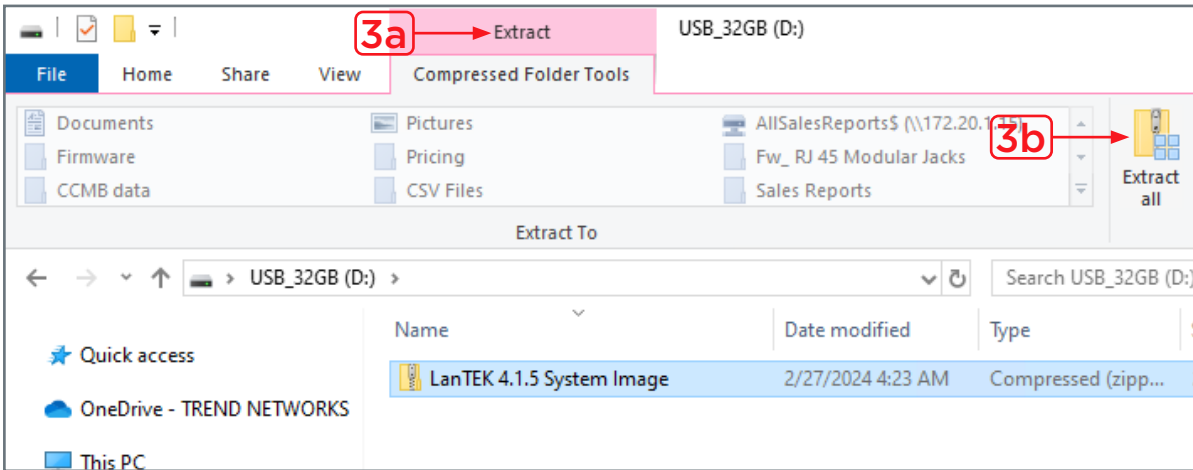



4. Prepare Main handset


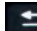
- Power off the handset
- Remove any test adapters from the handset
- Connect main handset to the DC power adapter
- Connect the USB flash drive to the main handset
- Power on main handset and wait for the following screen:



5. Select language

- Press the  button to select the desired language.
- Press the  button to continue when the desired language is selected.

6. Confirm update and deletion of stored data

- Press  when prompted to continue through the installation steps.
- Press  during any of these steps to abort the upgrade.



7. Loading update files

The handset loads files from the USB drive and displays the progress in 5% increments.




- When the files are finished loading, press the power button and wait for the tester to power OFF.
- When the tester is OFF, remove the USB drive.
- Power ON the tester to begin the next step of the upgrade process.




8. Main Handset update

During the update, the green link and red warning LEDs will flash as an indication that the handset is updating.

- This process may take up to 20 minutes.
- Do not disconnect the power or attempt to turn the handset off during the update process.

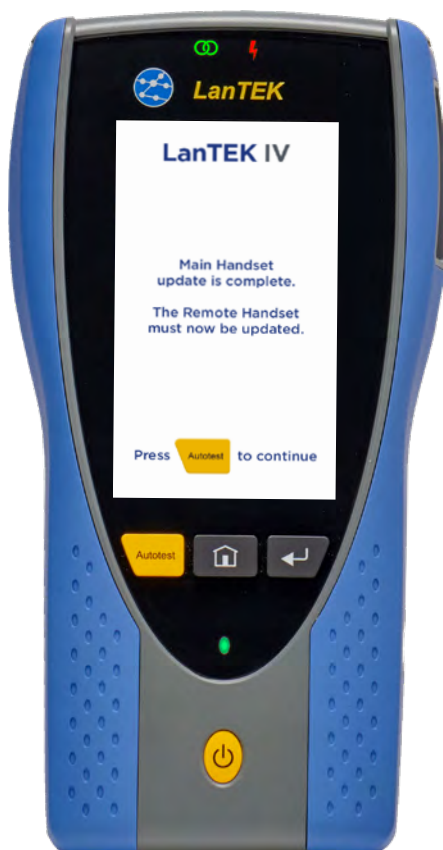


9. Main Handset complete

- When the Main Handset update is complete a screen will be displayed prompting the update of the Remote Handset.
- Press the  button to continue and display the direction for updating the Remote Handset.

10. Direction for Remote Handset Update

The Main Handset will display the directions for updating the Remote Handset. You can follow those directions or continue with this document.



- When finished with the on-screen directions, press the  button to boot the Main handset into the updated software.


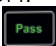
11. Prepare Remote Handset

- Power the remote handset **OFF**.
- Remove any test adapters from the handset.
- Connect DC power adapter to the handset.
- Connect the USB flash drive to the remote handset.
- Power the remote handset **ON**. The Tone and Talk LEDs will alternately FLASH green.




12. Load Remote Handset Files




1. Press the  button when the Tone LED is green.
2. The  LED will light green when finished.


13. Remote Handset Update

- Turn the handset **OFF**.
- With the handset is OFF, remove the USB drive.
- Turn the handset **ON**.
- The Tone and Talk LEDs will flash red/green during the update.
- This process can take up to 20 minutes.
Do not disconnect the power or attempt to shut down the handset during the update.
- **The LEDs will stop flashing when the update is complete.** The handset is ready for use.

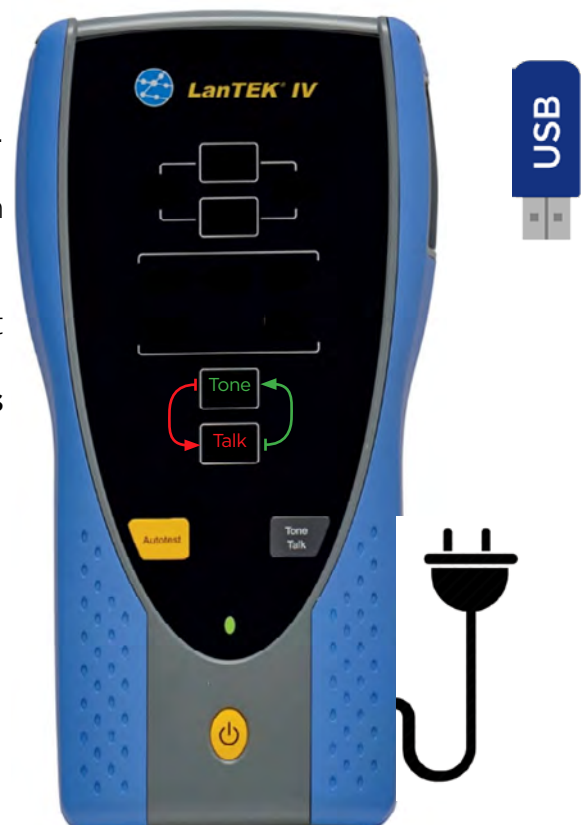

14. Set Reference

- Connect the handsets with a Permanent Link adapter and Channel adapter, or two Channel Adapters with a **2m (6.5ft)** patch cord
- Press Preferences  from the Home screen and choose Set Reference.
- Press Set Reference on the diagram.
- Press OK when the process is finished.

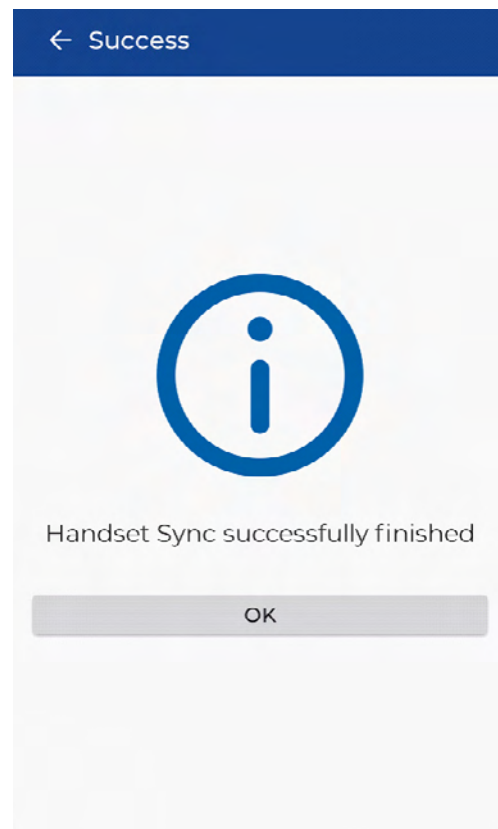

The Main and Remote handsets are now updated and ready for use.